


| No. | Description | Qty |
|--------|--------------------------|-----|
| HL8023 | Pump Assembly | 1 |
| HL8001 | Hydraulic Valve Assembly | 1 |
| HL8002 | Safety Valve Assembly | 1 |
| HL8003 | Lowering Screw Assembly | 1 |
| HL8004 | Lowering Valve Assembly | 1 |
| HL8024 | Pump Piston Assembly | 1 |
| HL8032 | Piston Rod Assembly | 1 |
| HL8033 | Bearing of the Steering | 1 |
| HL8035 | Seals kit | 1 |


Seals Kit: 3907, 3914, 3915, 3930, 3936, 3943, 3944, 3945, 3948, 3949, 3962, 3963, 3966

Steering Wheel

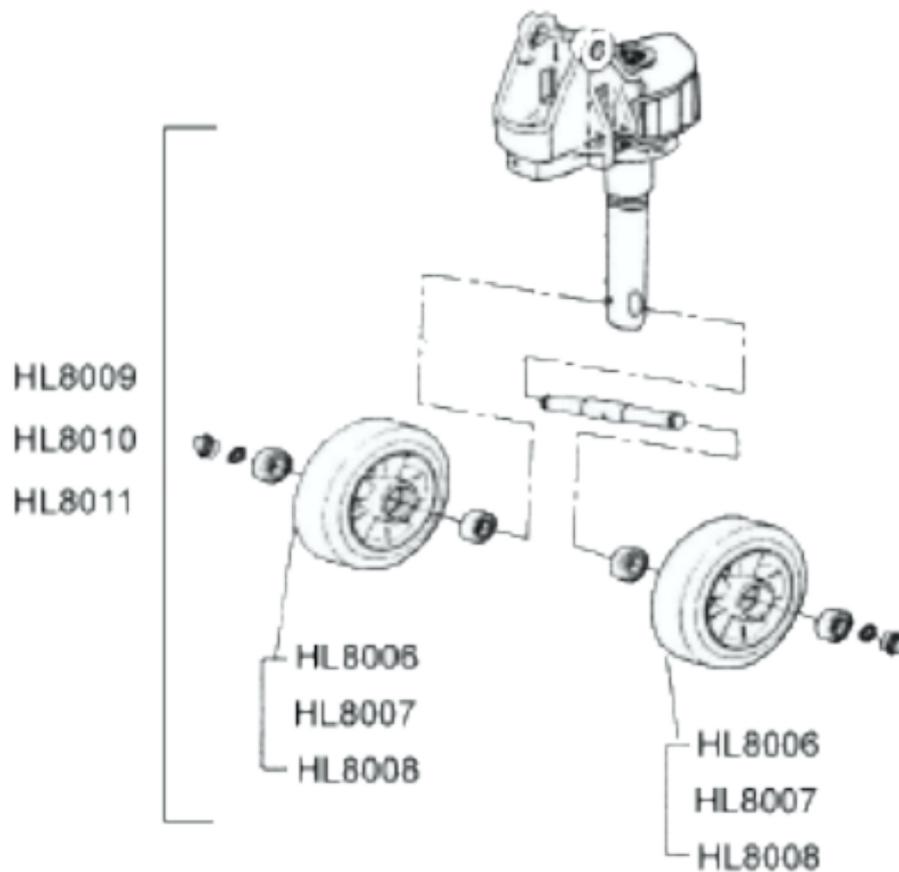


| No. | Description | Qty |
|--------|----------------------------------|-----|
| HL8006 | Steering wheel (Rubber) | 2 |
| HL8007 | Steering wheel (PU) | 2 |
| HL8008 | Steering wheel (Nylon) | 2 |
| HL8009 | Steering wheel assembly (Rubber) | 2 |
| HL8010 | Steering wheel assembly (PU) | 2 |
| HL8011 | Steering wheel assembly (Nylon) | 2 |

Torsion Tube

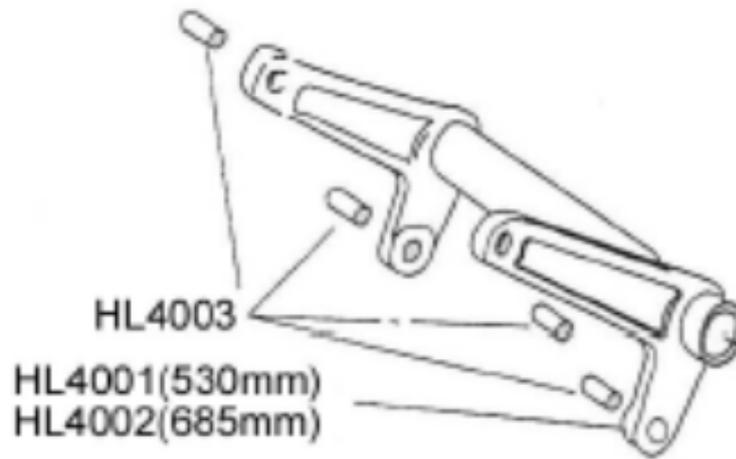


| No. | Description | Qty |
|--------|----------------------|-----|
| HL4001 | Torsion Tube (530mm) | 1 |
| HL4002 | Torsion Tube (685mm) | 1 |
| HL4003 | Bushing | 4 |

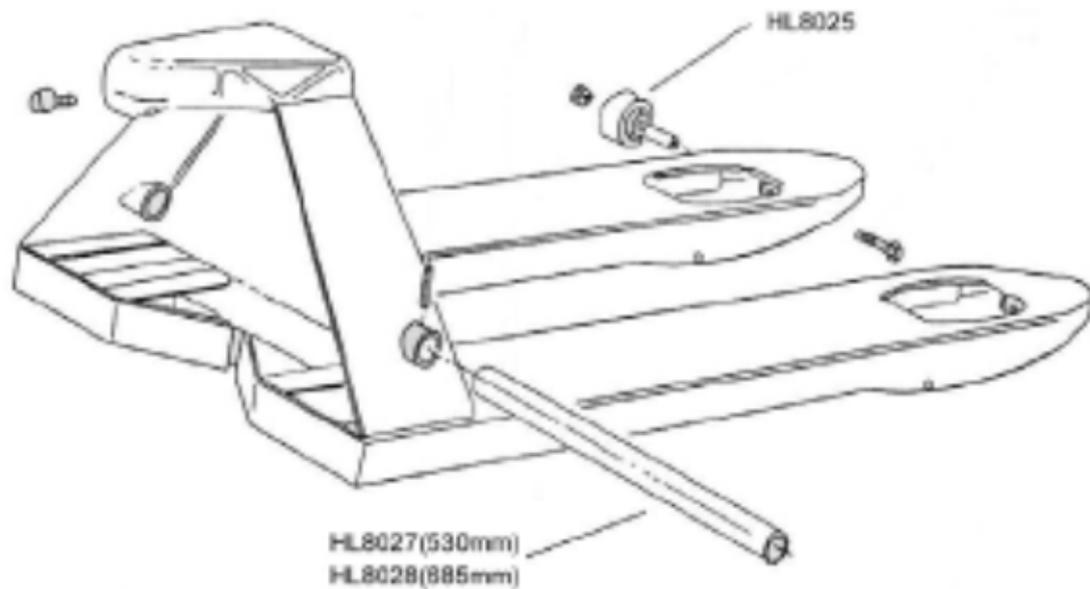


| No. | Description | Qty |
|--------|----------------------------|-----|
| HL8025 | Loading Roller | 2 |
| HL8027 | Torsion Tube Shaft (530mm) | 1 |
| HL8028 | Torsion Tube Shaft (685mm) | 1 |

Tandem Load Roller

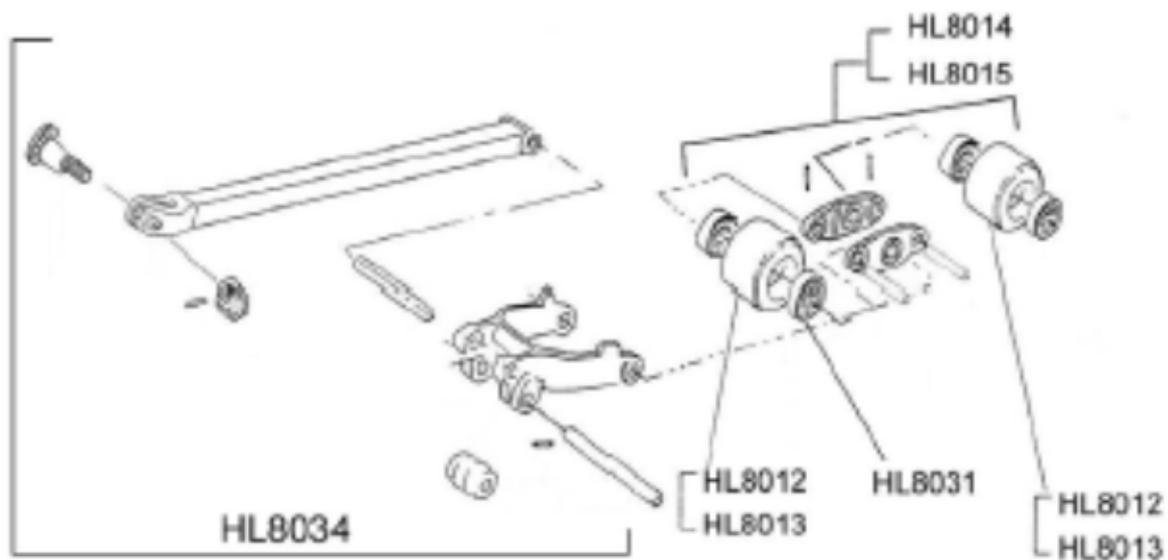


| No. | Description | Qty |
|--------|-------------------------------------|-----|
| HL8012 | Tandem Load Roller (Nylon) | 4 |
| HL8013 | Tandem Load Roller (PU) | 4 |
| HL8014 | Tandem Load Roller Assembly (Nylon) | 2 |
| HL8015 | Tandem Load Roller Assembly (PU) | 2 |
| HL8031 | Bearing & Nylon washer | 8 |
| HL8034 | Push Rod Assembly | 2 |

Single Load Roller

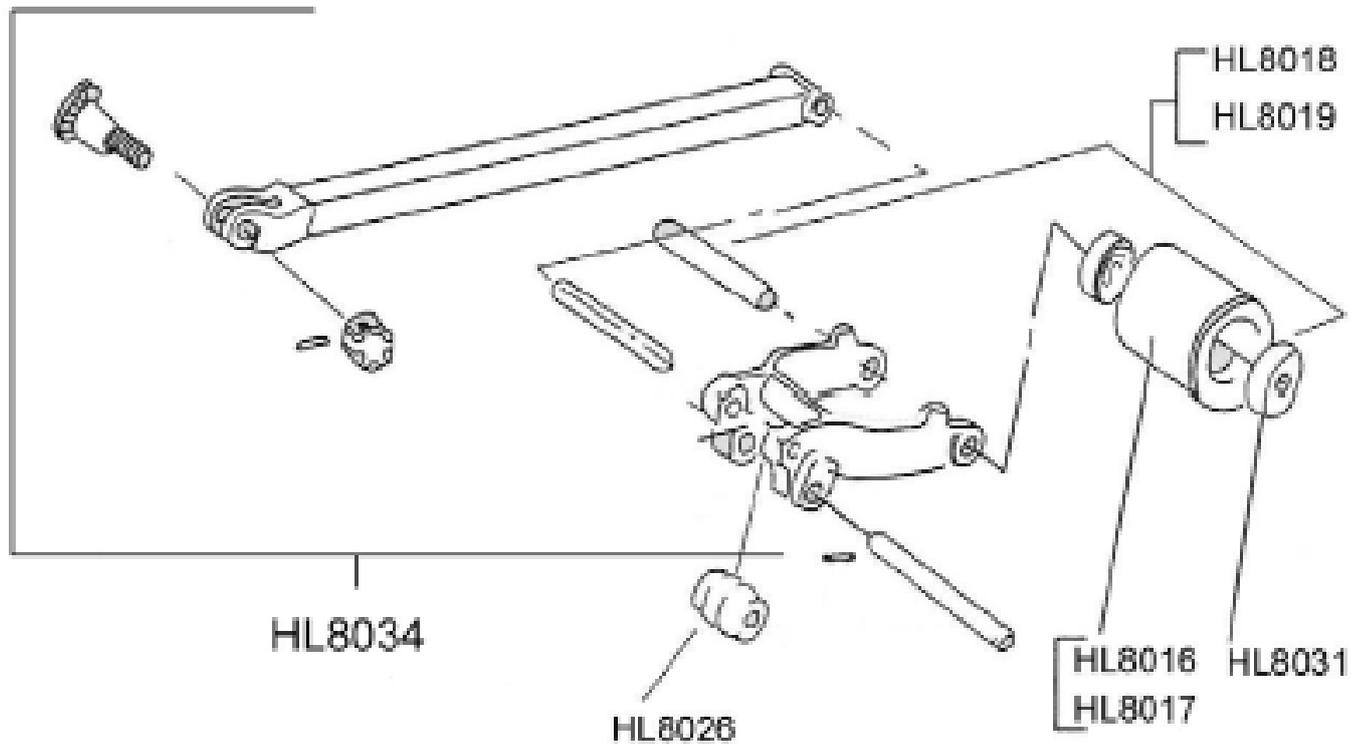


| No. | Description | Qty |
|--------|-------------------------------------|-----|
| HL8016 | Single Load Roller (Nylon) | 2 |
| HL8017 | Single Load Roller (PU) | 2 |
| HL8018 | Single Load Roller Assembly (Nylon) | 2 |
| HL8019 | Single Load Roller Assembly (PU) | 2 |
| HL8026 | Roller | 2 |
| HL8031 | Bearing & Nylon washer | 4 |
| HL8034 | Push Rod Assembly | 2 |

Handle Assembly

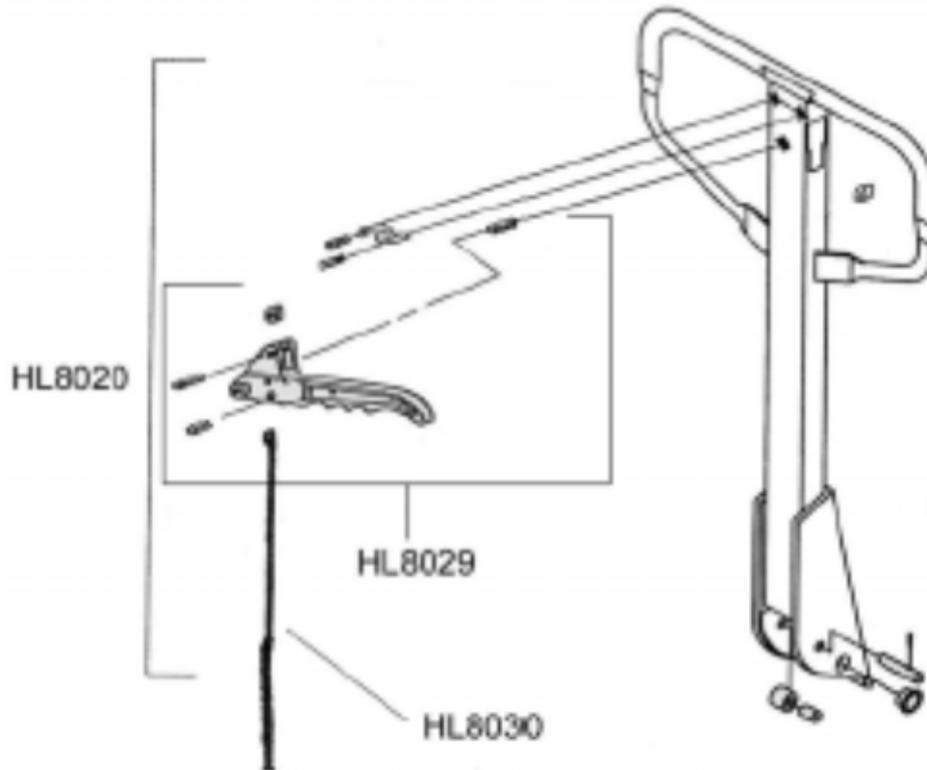


| No. | Description | Qty |
|--------|-----------------|-----|
| HL8020 | Handle Assembly | 1 |
| HL8029 | Control Lever | 1 |
| HL8030 | Chain | 1 |

Foot Brake Assembly

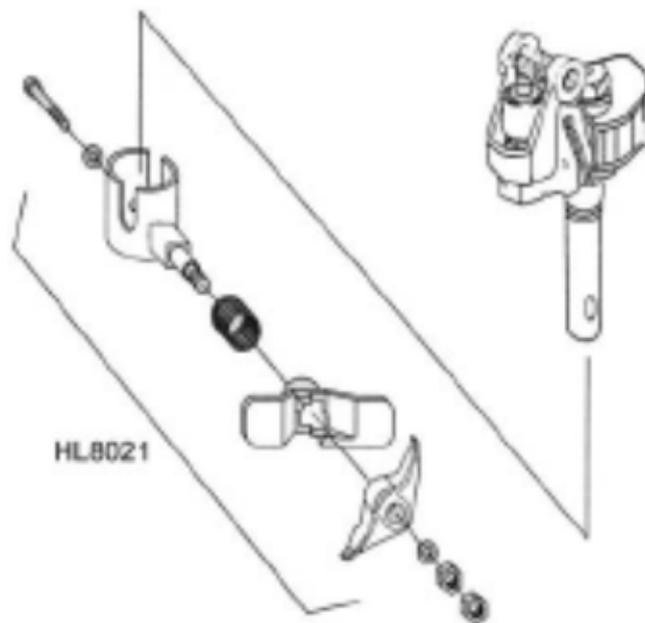

| No. | Description | Qty |
|--------|---------------------|-----|
| HL8021 | Foot Brake Assembly | 1 |

Handle Brake Assembly

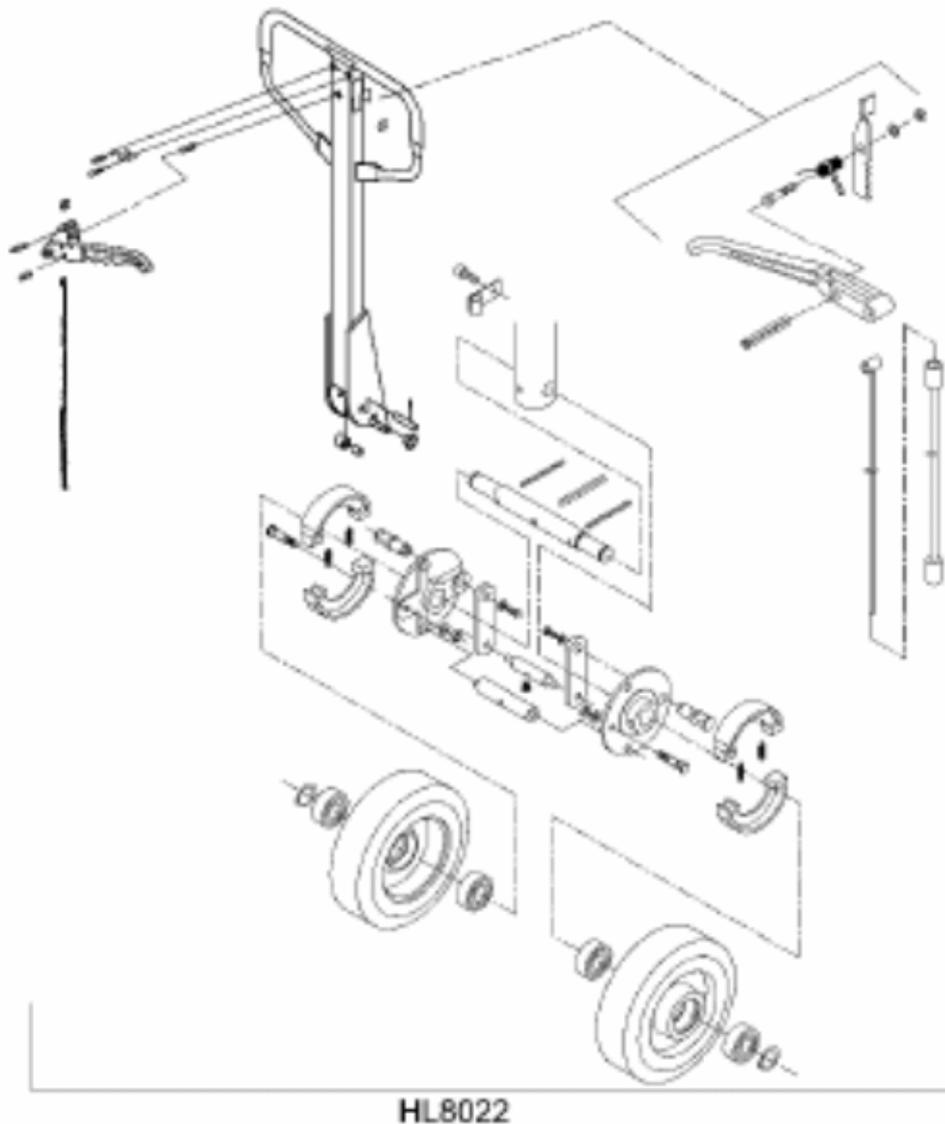

| No. | Description | Qty |
|--------|-----------------------|-----|
| HL8022 | Handle Brake Assembly | 1 |

| Part No | Name |
|---------|----------------------------------|
| HL8000 | Pump assy |
| HL8001 | vavle assy. |
| HL8002 | safety valve assy |
| HL8003 | lowering screw assy |
| HL8004 | lowering valve assy |
| HL8005 | pump piston assy |
| HL8006 | steering wheel (Rubber) |
| HL8007 | steering wheel (Poly) |
| HL8008 | steering wheel (Nylon) |
| HL8009 | steering wheel assy (rubber) |
| HL8010 | steering wheel assy (poly) |
| HL8011 | steering wheel assy (nylon) |
| HL8012 | Tandem load roller (nylon) |
| HL8013 | Tandem load roller (poly) |
| HL8014 | Tandem load roller assy (nylon) |
| HL8015 | Tandem load roller assy (poly) |
| HL8016 | single load roller (nylon) |
| HL8017 | single load roller (poly) |
| HL8018 | single load roller assy. (nylon) |
| HL8019 | single load roller assy.(poly) |
| HL8020 | Handle assy. |
| HL8021 | foot brake assy |
| HL8022 | handle brake assy |
| HL8023 | Pump assy |
| HL8024 | pump piston assy |
| HL8025 | load roll front |
| HL8026 | load roll back |
| HL8027 | torision tube shaft 530 |
| HL8028 | torision tube shaft 685 |
| HL8029 | control lever |
| HL8030 | Rod and chain |
| HL8031 | bearing |
| HL3904 | axle |
| HL4001 | torsion tube assy 530 |
| HL4002 | torsion tube assy 685 |
| HL4003 | bushing |